



A. Package contents

The parts that are mentioned hereafter are included in the carton. Please contact our resellers if any parts are missing or damaged.

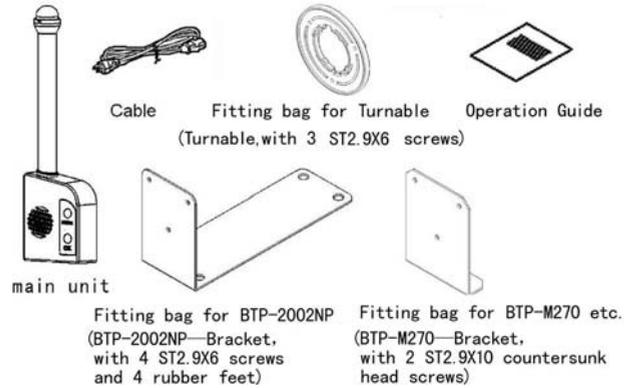

B. About the Print Messenger

Exterior and structure (see figures below)

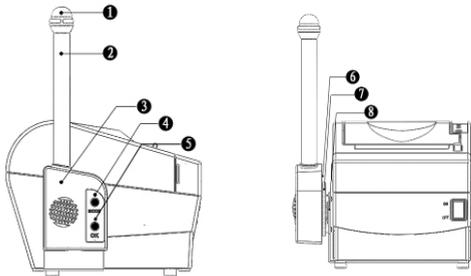


1—Light	2—Light pole	3—Top cover
4—MODE key	5—OK key	6—Bottom cover
7—Turn-plate	8—Bracket	

C. Assembling the Print Messenger

1

■ Mounting of the bracket

Mount the metal bracket with two nylon feet and two screws onto the bottom of the printer as shown in the following diagram. Then mount the two remaining nylon feet onto the bottom of the printer opposite the metal bracket (see drawing)

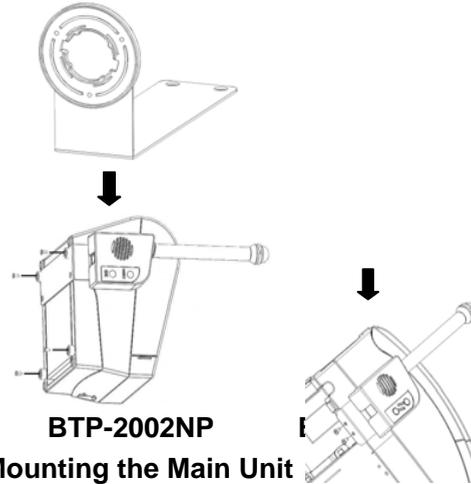

■ Mounting the Main Unit

Step 1: Insert the Main Unit in the plastic turn-plate of the Bracket as shown in Figure 1.


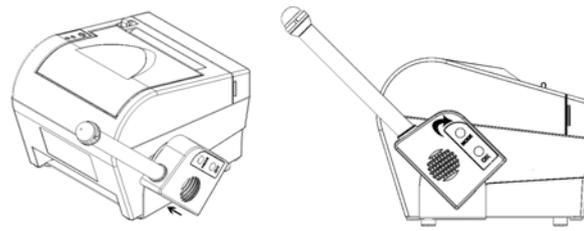


FIGURE 1

FIGURE 2

Step 2 : Rotate the Main Unit clockwise as shown in figures

2 and 3 if the printer is to be used on a horizontal surface. If the printer is mounted on a vertical surface by means of our Wall Mount System then the Main Unit should be rotated anti-clockwise.

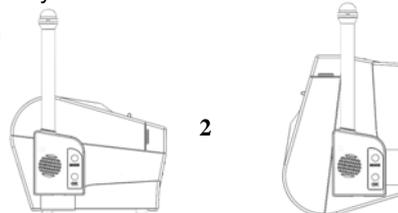

2

3

FIGURE 3

FIGURE 4

Step 3 : After you have ensured that the printer is switched off, the Main Unit can be connected to the Cashdrawer connector at the back of the printer as shown in figure 5.


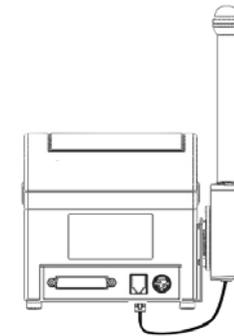


FIGURE 5

 D. Printer key-pad



The printer module has two keys: MODE key and OK key.

The Print Messenger has two modes, called "Operation" and "Setting". The operation mode is used for operating the Print Messenger; the settings mode is used for setting the

